





Fireplace air humidifier is a device used in hot air distribution systems to prevent the heated air from getting very dry and, because of that, not comfortable. It is to be mounted on the air outlet of metal distributor connected to the hot air ventilator. Device is equipped with a water tank from which water vaporizes because it is heated by the hot fireplace insert. Water-vapour is then transported to various rooms of the building with the hot air distribution ducts. Set includes a filling device that is to be mounted on the cladding close to the humidifier in a place which is easily accessible for water filling.

**Usage**

humidifying air in the fireplace air heating systems.

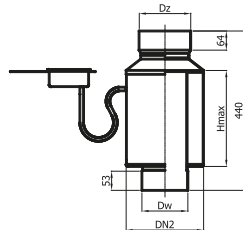

Type	Measurements [mm]				Max amount of water [l]
	Dw	Dz	Hmax	DN2	
NWK100	108	88	247	160	3.5
NWK125	133	115	247	200	4.5
NWK150	158	138	247	225	5.5

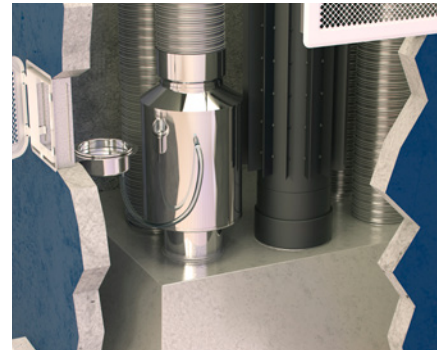

Destination	N	N - air humidifying
Material	CH	CH - chrome-nickel steel sheet